



L ₁	SW Antenna Coil	J	Earphone Jack	R ₁	7.5 KΩ ± 5% 1/4W	R ₁₄	56 KΩ ± 5% 1/4W	C ₁₋₁ C ₁₋₂	Tuning Capacitor Trimmer	C ₁₁	2 PF	C ₁₅	30 μF 3 V
L ₂	BC Antenna Coil	B	Battery BL-006P (9V)	R ₂	22 KΩ	R ₁₅	5 Ω	C ₁₋₃ C ₁₋₄ C ₁₋₅		C ₁₂	0.01 μF	C ₁₆	0.05 μF
L ₃	SW Oscillator Coil			R ₃	470 Ω	R ₁₆	680 Ω	C ₂	2 PF	C ₁₃	200 PF	C ₁₇	5 PF
L ₄	BC Oscillator Coil	R ₁	27 KΩ ± 5% 1/4W	R ₄	5 KΩ VR with Switch	R ₁₇	220 Ω	C ₃	0.005 μF	C ₁₄	0.01 μF	C ₁₈	10 PF
IFT ₁	1 F Trans.	R ₅	42 KΩ	R ₆	22 KΩ ± 5% 1/4W	R ₁₈	6.8 KΩ	C ₄	0.01 μF	C ₁₉	10 μF 3 V	C ₁₉	0.02 μF
IFT ₂		R ₇	22 KΩ	R ₉	10 KΩ	R ₁₉	220 Ω	C ₅	370 PF	C ₂₀	200 PF	C ₂₀	10 μF 10 V
IFT ₃		R ₈	220 Ω	R ₁₀	56 KΩ	R ₂₀	22 Ω	C ₆	2000 PF	C ₂₁	0.02 μF		
T ₁	Input Trans.	R ₁₁	100 KΩ	R ₁₂	820 Ω	R ₂₁	22 Ω	C ₇	200 PF	C ₂₂	5 μF 6 V		
T ₂	Output Trans.	R ₁₃	470 Ω	R ₁₄	820 Ω	R ₂₂	22 KΩ	C ₈	20 μF 10 V	C ₂₃	0.001 μF		
SP	6 cm P. D. Speaker 8 Ω	R ₁₅	820 Ω	R ₁₆	10 KΩ	R ₂₃	220 Ω	C ₉	10 μF 3 V	C ₂₄	5 μF 6 V		

Note: * Adjusting Resistors